



### Cotton Candy Machine Instructions

- The Cotton Candy Machine can only run up to an hour of continuous spinning. Must turn off for 20 minutes to cool down.
- The bowl must be latched in by the 4 latches or the unit will not turn on or work properly.
- Recommend safety glasses.
- Recommend food handler's gloves
- Power on for 1 minute.
- Turn on the heat and allow it to heat up for 10 minutes.
- Use one scoop of sugar for each cone
- Use a cone to start spinning.
- Enjoy.